



Hard Drive Enclosure  
Festplattengehäuse  
Caja Para Disco Duro  
Châssis Pour Disque Dur

## Taurus Mini Super-S LCM

EN

DE

ES

FR

**Manual**  
**Handbuch**  
**Manual**  
**Manuel**

E15-570Q1AA022  
8/10/2011 - v1.1




For more detailed instructions, please download the PDF manual at  
<http://www.akitio.com/support/user-manuals>

© 2011 by AKiTiO - All Rights Reserved

*AKiTiO assumes no responsibility for any errors or differences between the product you have and the one mentioned in this document and reserves the right to make changes in the specifications and/or design of this product without prior notice. The diagrams contained in this document are for reference and may not fully represent the real product.*

## Front View - Frontansicht Vista frontal - Vue de face

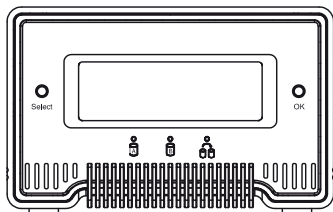

- A B** Green = Data access (read/write)  
Red = Error or empty drive bay
- A B** Grün = Datenzugriff (lesen/schreiben)  
Rot = Error oder leerer Laufwerksschacht
- A B** Verde = Acceso a datos (lectura/escritura)  
Rojo = Error o bahía de unidad vacía
- A B** Vert = Accès aux données (lecture/écriture)  
Rouge = Erreur ou bac du lecteur vide
- A B** Orange = Rebuilding data  
Orange = Am Wiederherstellen der Daten  
Naranja = Reconstruyendo datos  
Orange = Reconstruction données


### Select

Select menu or mode  
Wähle Menü oder Betriebsart aus  
Seleccionar menú o modo  
Sélectionner menu ou mode

### OK

Confirm or enter  
Bestätigen oder öffnen  
Confirmar o entrar  
Confirmer ou saisir

## Rear View - Rückansicht Vista posterior - Vue arrière

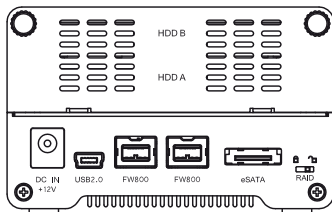

### **USB 2.0**

USB 2.0 High Speed port  
USB 2.0 High Speed Anschluss  
Puerto de USB 2.0 High Speed  
Port USB 2.0 High Speed

### **FW800**

FireWire 800 ports  
FireWire 800 Anschlüsse  
Puertos FireWire 800  
Ports FireWire 800

### **eSATA**

eSATA port  
eSATA Anschluss  
Puerto de eSATA  
Port eSATA

### **DC IN +12V**

Power receptacle  
Netzanschluss  
Toma de alimentación  
Prise de courant



### **RAID**

RAID mode lock  
RAID-Modus Sperre  
Bloqueo del modo RAID  
Verrouillage mode RAID




### **HDD A/B**

Hard drive A/B  
Festplatte A/B  
Disco duro A/B  
Disque dur A/B





1

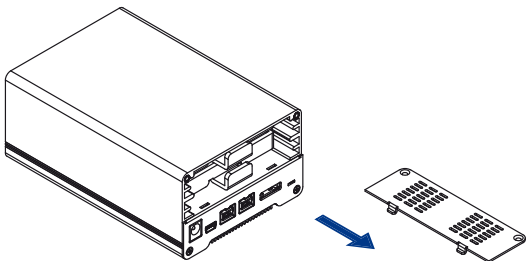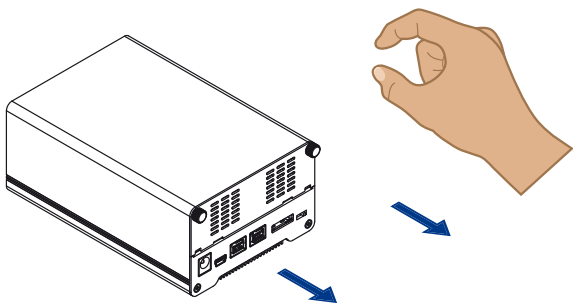

2

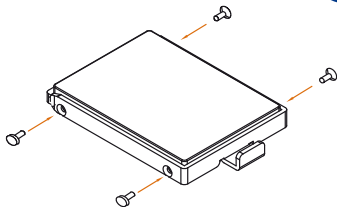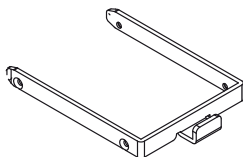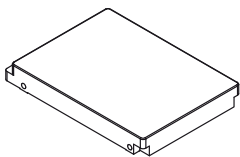

3

 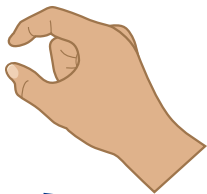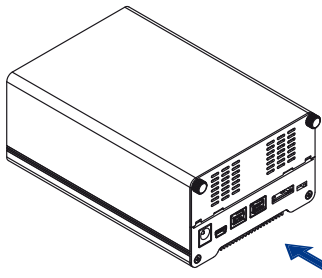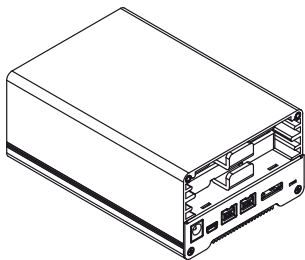



2 Select ▶ Select ▶ Select ▶ OK ▶ Select ▶

RAID Mode Setup
RAID 1 Enter>

**Note:**

When bus-power is insufficient, plug in the external power supply.

**Hinweis:**

Wenn die Stromversorgung über das Datenkabel nicht ausreicht, schließen Sie das externe Netzteil an.

**Nota:**


Quando la alimentación del bus sea insuficiente enchufe la fuente de alimentación externa.

**Note:**

Lorsque l'alimentation via bus est insuffisante, veuillez brancher l'alimentation externe.


## Windows

1. Start / Run --> diskmgmt.msc
2. NTFS

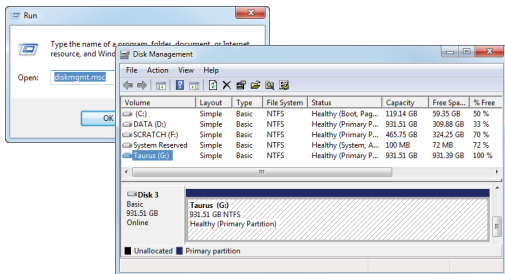

## Mac

1. Applications / Utilities --> Disk Utility
2. Mac OS Extended (HFS+)

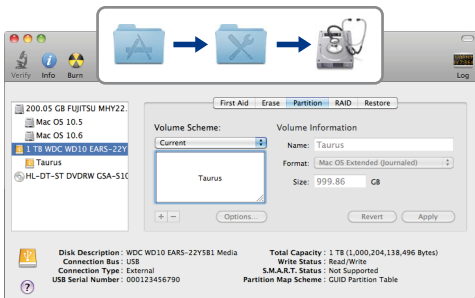

For more detailed instructions, please visit our website at  
<http://www.akitio.com/information-center/formatting-external-hard-drives>